


Similar to Crown moldings but used to bridge smaller areas. Crowns are always "sprung" while beds are either sprung or plain. A sprung molding has the interior corner beveled off to better fit a right angle joint. Profiles shown at approximately 100% of actual size.


Standard Bed Moldings

Profile	Order No.
WP70 11/16" x 2-3/4" Top	# 4570700
WP70 11/16" x 2-3/4" Bottom	# 4570701
WP71 11/16" x 2-5/8" Top	# 4570710
WP71 11/16" x 2-5/8" Bottom	# 4570711
WP72 11/16" x 2-1/4" Top	# 4570720
WP72 11/16" x 2-1/4" Bottom	# 4570721
WP74 11/16" x 1-3/4" Top	# 4570740
WP74 11/16" x 1-3/4" Bottom	# 4570741
WP75 11/16" x 1-5/8" Top	# 4570750
WP75 11/16" x 1-5/8" Bottom	# 4570751
WP76 11/16" x 1-1/2" Top	# 4570760
WP76 11/16" x 1-1/2" Bottom	# 4570761

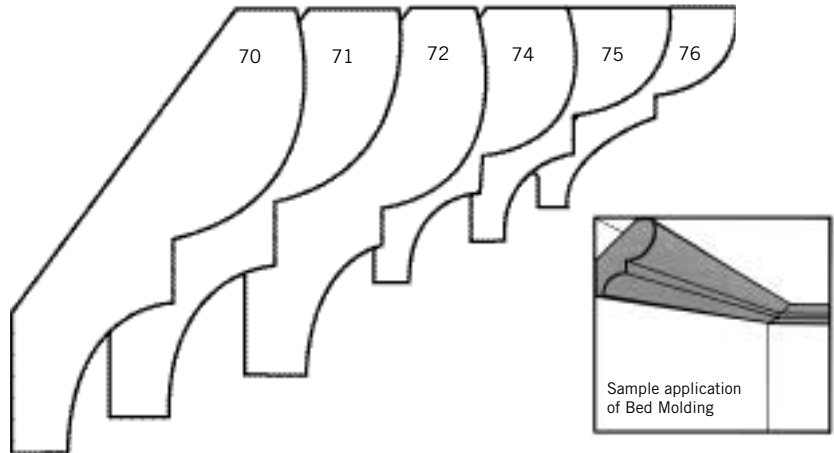

These profiles provide a decorative trim around a doorway, window or other opening. Suitable for use both indoors and as an outside trim molding. Shown at approximately 100% of actual size.

Standard Casing Moldings

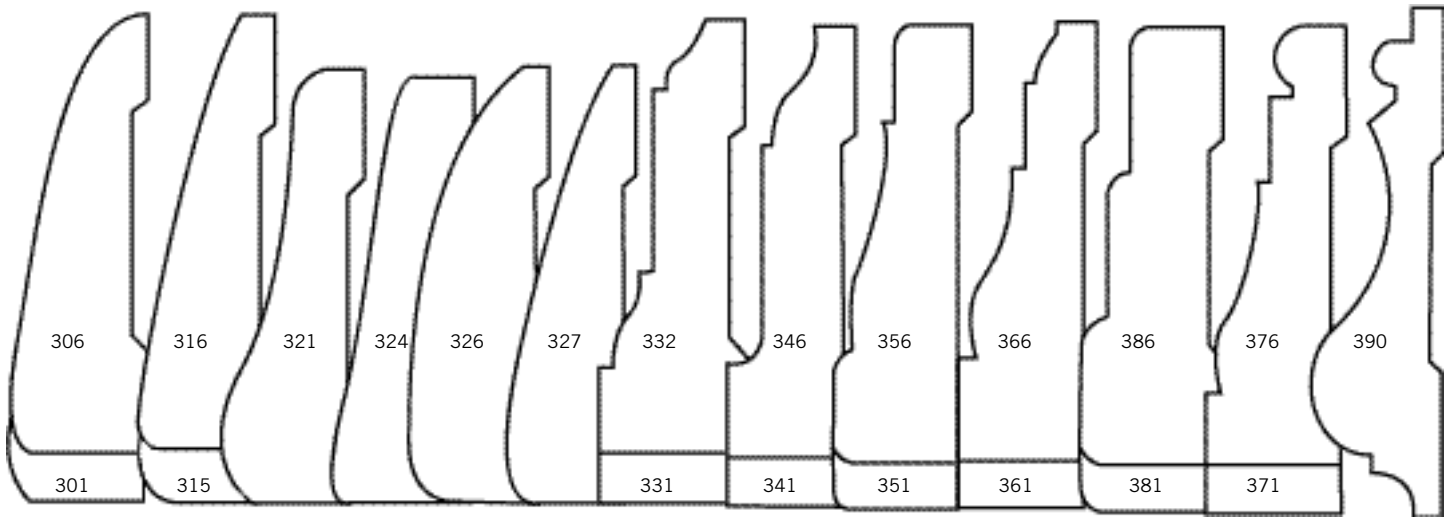


Profile	Order No.
WP301 11/16" x 2-1/2" 1-up	# 4573010
WP306 11/16" x 2-1/4" 1-up	# 4573060
WP315 11/16" x 2-1/2" 1-up	# 4573150
WP316 11/16" x 2-1/4" 1-up	# 4573160
WP316 11/16" x 2-1/4" 2-up	# 4573162
WP321 11/16" x 2-1/4" 1-up	# 4573210
WP321 11/16" x 2-1/4" 2-up	# 4573212
WP324 11/16" x 2-1/4" 1-up	# 4573240
WP324 11/16" x 2-1/4" 2-up	# 4573242
WP326 11/16" x 2-1/4" 1-up	# 4573260
WP326 11/16" x 2-1/4" 2-up	# 4573262
WP327 11/16" x 2-1/4" 1-up	# 4573270
WP327 11/16" x 2-1/4" 2-up	# 4573272

Profile	Order No.
WP331 11/16" x 2-1/2" 1-up	# 4573310
WP332 11/16" x 2-1/4" 1-up	# 4573320
WP341 5/8" x 2-1/2" 1-up	# 4573410
WP346 5/8" x 2-1/4" 1-up	# 4573460
WP351 11/16" x 2-1/2" 1-up	# 4573510
WP356 11/16" x 2-1/4" 1-up	# 4573560
WP361 11/16" x 2-1/2" 1-up	# 4573610
WP366 11/16" x 2-1/4" 1-up	# 4573660
WP371 11/16" x 2-1/2" 1-up	# 4573710
WP376 11/16" x 2-1/4" 1-up	# 4573760
WP381 11/16" x 2-1/2" 1-up	# 4573810
WP386 11/16" x 2-1/4" 1-up	# 4573860
WP390 11/16" x 2-5/8" 1-up	# 4573900

Variable Width 45° Bottom Knife

Variable width 45° bottom knife

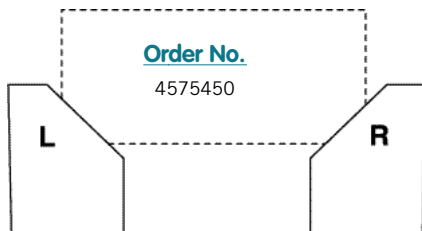

Back Relief Knife Sets



By putting a back relief on a molding pattern such as a base molding, you will limit the contact that the pattern makes against

a wall providing a better fit. Almost a necessity when butting moldings up against lath and plaster walls. Packaged in sets of 3 knives that are used with the standard planer knife gibs.

Size	Order No.
1" Width	# 4575100
1-1/4" Width	# 4575185
1-1/2" Width	# 4575150
1-3/4" Width	# 4575175
2" Width	# 4575200
2-1/4" Width	# 4575225
2-1/2" Width	# 4575250
2-3/4" Width	# 4575275
3" Width	# 4575300